 
#### Diesel Pre-Heating Starter Switch

Pre-Heating Starter Switch supplied with two keys. Key removes in park and off.









15/54 = Ignition 17 = Start 19 = Preheat 58 = Park/Side Lamp 50a = Starter Control 30 = + Input

4005	6JB 003 959-002
Mounting	26.5mm diameter opening
For Panels	Up to 3.5mm thick
Function	5 position switch (park, off, driving, pre-heat, start)

TERMINAL	POSITION	FUNCTION	CURRENT @ 24V
30-58	Р	Park Lamps	4A
30-15/54	1	Driving	18A
30-19	2	Preheat	35A
30-50a/17	3	Start	5A/35A

### Ignition and Starter Switch

Switch with spring loaded return. Supplied with two keys.



 


4008	6JB 950 505-001
Mounting	19mm diameter opening
For Panels	Up to 19mm thick
Maximum Load	@12V ignition 25A, start 12A, accessory 15A
Spare Part	Blank key number Silica BH4
Function	Four position switch (accessory, off, ignition, start)


# Heavy Duty Ignition and Starter Switch


Heavy Duty Ignition and Starter Switch, featuring plastic outer construction for maximum protection against damage. Supplied with two keys.





4008HD	6JK 905 339-001
Mounting	19mm diameter opening.
For Panels	Up to 10mm thick
Maximum Load	@12V park 2A, ignition 20A, start 25A., accessory 30A
Function	Four position switch (park, off, ignition, start). Key removes in park and off

 

 


#### Ignition and Starter Switches

Two keys supplied. Start-lockout mechanism to prevent accidental engagement of starter.



 4009	6JK 950 838-001		22MM SHAFT
4010	6JK 905 340-001		18MM SHAFT
Mounting	4009 4010	22.5mm diameter opening 18.5mm diameter opening	
For Panels	Up to 19mm thick		
Maximum Load	@12V ignition 25A, start 50A, accessory 20A		
Function	Four position switc	h (accessory, off, ignition, start)	



2760	6JB 905 308-001
Mounting	21mm diameter opening
For Panels	Up to 30mm thick
Maximum Load	@12V ignition 10A, start 5A, accessory 10A
Function	Four position switch (accessory, off, ignition and start)

## Ignition and Starter Switch

Switch with spring-loaded return. 4 screw terminals and satin finish. Corrosion-resistant brass construction.





2766	6JB 905 313-001	
Mounting	21mm diameter opening	
For Panels	Up to 25mm thick	
Maximum Load	@12V ignition 10A, start 5A, accessory 10A	
Function	Four position switch (accessory, off, ignition and start)	

### Ignition and Starter Switch

Four position switch with spring loaded return. Four screw terminals.

