



# Fiat 500 X - Engine dies after starting

Data sheet

Manufacturer

Fiat

Vehicle model

500X

Year of manufacture

2014 - 2017

Symptoms

Engine does not start | Engine dies after starting

## Important safety note

## Engine dies after starting

On the above-mentioned vehicles, the engine may die again shortly after starting at low outside temperatures (-10 °C). This is often the case when the vehicle has been parked overnight.

Particularly when it is operated for short distances, condensation accumulates in the exhaust system, which freezes at low outside temperatures and blocks the exhaust gas flow. This causes the engine to stop after starting.

To remedy this, a hole with a maximum depth of 25 mm and a diameter of 3 mm should be drilled at the lower end of the rear silencer. This ensures that the condensation water is drained.

Reprinting, distribution, reproduction, exploitation in any form or disclosure of the contents of this document, even in part, is prohibited without our express, written approval; indication of the document source is also required. The schematic illustrations, pictures and descriptions serve only for the purposes of explanation and representation of the instructions and cannot be used as a basis for installation or assembly work. All rights reserved.