

Mazda 6 - Engine will not start | HELLA

Mazda

6 (GH)

Model year: 2008-2012

Engine will not start

If the engine in the above vehicle will not start and the display remains dark, the reason may be a faulty earth connection (see marking, image 1).

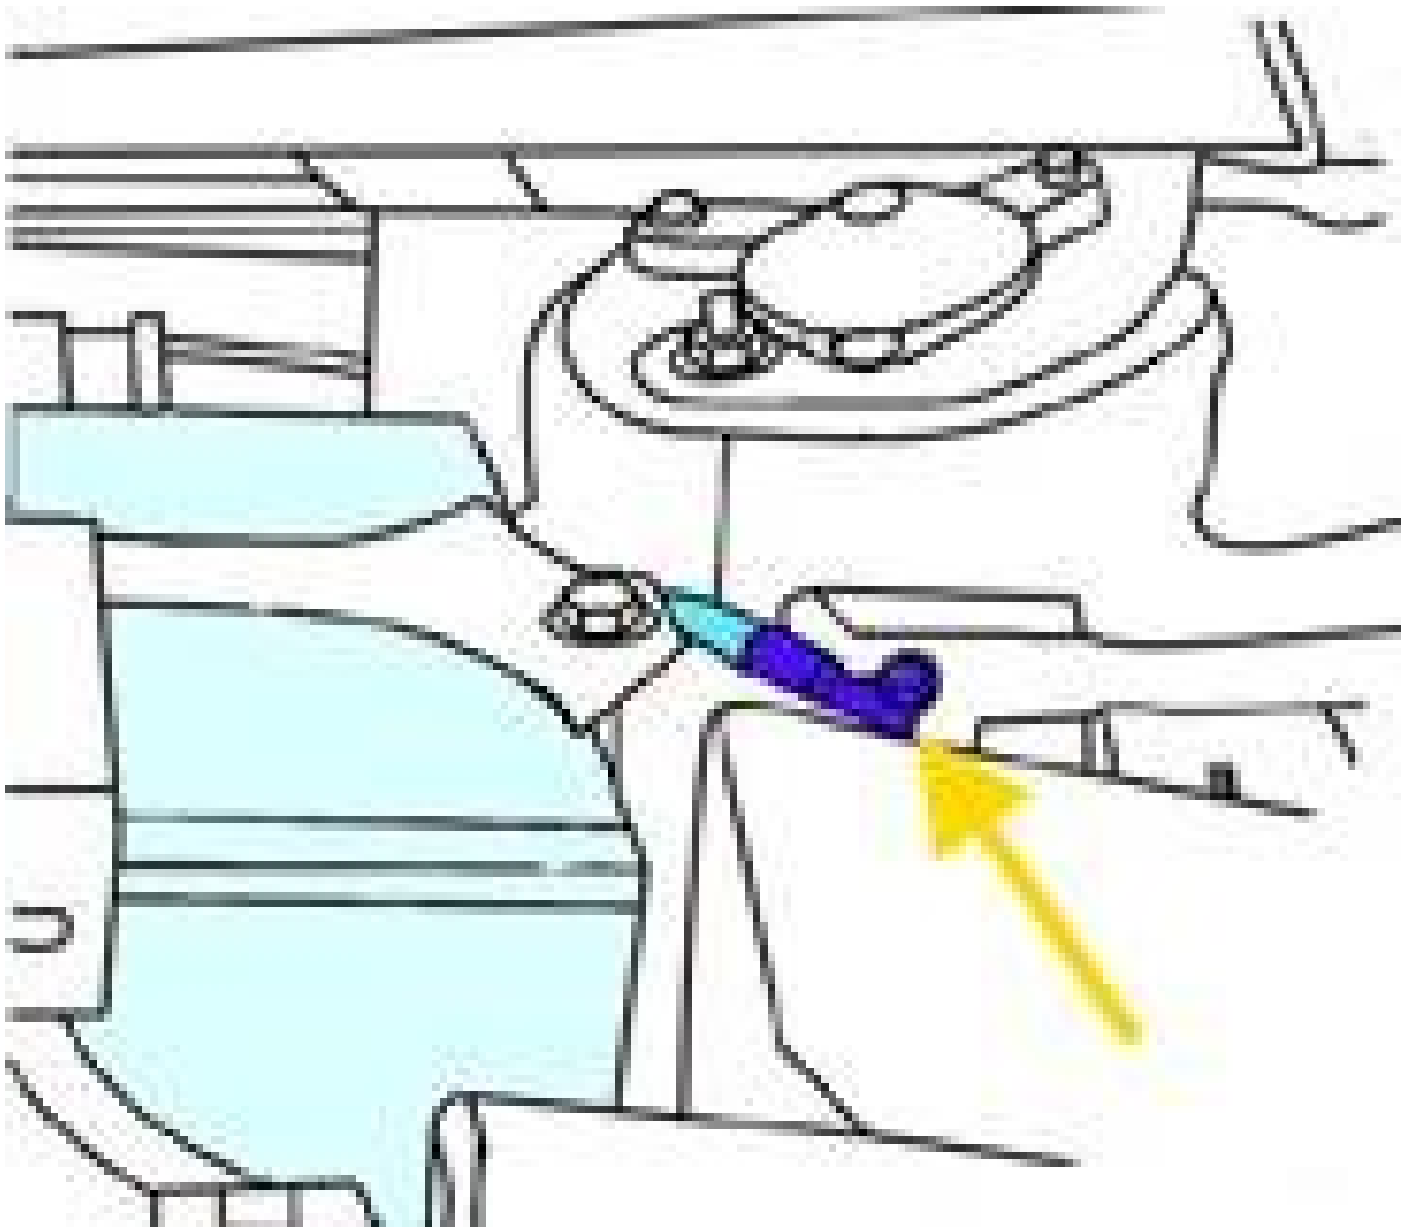


Image 1

It is possible that the connection to the earth pin was not secured properly. This means that clean contact between the earth cable and the earth connection pin cannot be guaranteed.

In order to remedy the fault, the connection should be checked, and cleaned if required. The connection must then be screwed together properly, in line with the manufacturer's instructions.

Important safety note

The following technical information and tips for practical use have been set up by HELLA in order to offer professional support to automotive workshops in their daily work. The information available here on this website is only to be used by appropriately trained specialist staff.

The reprinting, distribution, reproduction, exploitation in any form and disclosure of the contents of this document, even in part, is prohibited without our express written approval and indication of the source. The schematic illustrations, figures and descriptions are for explanation and presentation of the document text and cannot be used as a basis for installation or design. All rights reserved.