



Toyota Aygo - Airbag control lamp lights up

Data sheet

Manufacturer

Toyota

Vehicle model

Aygo

Year of manufacture

2005 - 2010

Symptoms

Airbag control lamp lights up | Error memory cannot be deleted

Important safety note

On the Toyota Aygo the airbag control lamp lights up continuously and the error memory cannot be cleared

On the above-mentioned vehicle, the airbag control light may come on permanently and the error memory cannot be cleared.

Possible causes are stored crash data that cannot be deleted or the airbag SRS control unit shows up a general defect (error code B1000).

Before replacing or repairing the control unit, the entire periphery of the airbag system (connector, wiring, fuse) should be checked.

The airbag control unit is located in the centre console, in front of the gear lever. In the course of troubleshooting and during removal and installation of control units and airbags, the specific instructions of the vehicle manufacturer must be strictly observed.

Reprinting, distribution, reproduction, exploitation in any form or disclosure of the contents of this document, even in part, is prohibited without our express, written approval; indication of the document source is also required. The schematic illustrations, pictures and descriptions serve only for the purposes of explanation and representation of the instructions and cannot be used as a basis for installation or assembly work. All rights reserved.