



## **Audi A6 (4B)** **Audi A4 (8E)**


### **Radiator fans keep running after ignition is off, vehicle battery is discharged.**

If there are complaints with these vehicles that the radiator fans keep running after the ignition is switched off and/or the vehicle battery is discharged, then a possible cause can be the power supply relay for the engine control unit. The after-running time of the radiator fans is set to not exceed 12 minutes after the ignition is switched off. If the fans do not stop, then the function of the power supply relay must be checked and the relay may need to be replaced. Additionally, the cable of terminal 87 of the engine control unit in the fuse box must be checked for damage.

The slot for the power supply relay is located in the fuse box.



Fuse box  
(Audi A6)

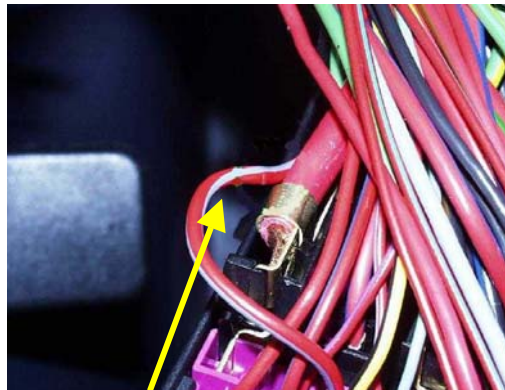

Cable terminal 87  
(damaged spot)