



BMW

X3 (E83)

2.0L diesel

Replacing the light source

The light source is replaced as follows:

Front passenger side:

Low and high beam and position light:

- Switch off the ignition.
- Unscrew the screw (10 SW) from the washer fluid reservoir (see Figure 1).
- Pull the washer fluid reservoir out of the holder from above and place it down a little further back.
- 2 covers are located on the rear headlight housing. The outside one for the low beam, the inner cap for the high beam and position light.
- Use a screwdriver to push the "lug" of the respective cap upwards and pull off the cap to the rear (see Fig. 3.).
- Pull the bulb with plug out of the reflector to the rear (see Fig. 4).
- Remove the bulb from the plug and replace.

Indicator:

- The washer fluid tank must also be removed here.
- Press down the "lug" and pull of the cap to the rear.
- Turn the bayonet cap to the left and remove from the reflector.
- Replace the bulb.

Bulletin





Driver's side:

Low and high beam, indicator and position light:

- Replacement is identical. The only difference is that you do not have to dismantle the water tank etc.

All dismantled parts must be assembled again in the obvious order. Ensure the lighting system is functioning properly. Check the headlight position and adjust if necessary.



Fig. 1



Fig. 2



Fig. 3



Fig. 4