



Ford Mondeo with Xenon light Model year from 2000

Light source replacement

To replace the light source in the above-mentioned vehicle, proceed as follows:

- Switch off the ignition.
- Remove the bayonet locks and pull the front grille off forwards (see Fig. 1).
- Pull out the locking rails (two per headlight) upwards (see Fig. 2).
- Pull the headlight out forwards and remove the central plug.
- Loosen the locked bracket at the top of the headlight and remove the two Torx screws on the housing cover (see Fig. 3).
- Pull back the housing cover (see Fig. 4)
- Turn the ignition module anti-clockwise and remove it from the Xenon light (see Fig. 5).
- Remove the screw attachment of the Xenon light and replace the light source (see Fig. 6).
- Parking light, indicator and driving light can be replaced easily.
- Replace the removed parts in reverse order.
- Check the system for perfect function.
- Adjust the headlights with the aid of a diagnosis tester (read out fault code, basic setting of headlight levelling etc.).



Fig. 1



Fig. 2

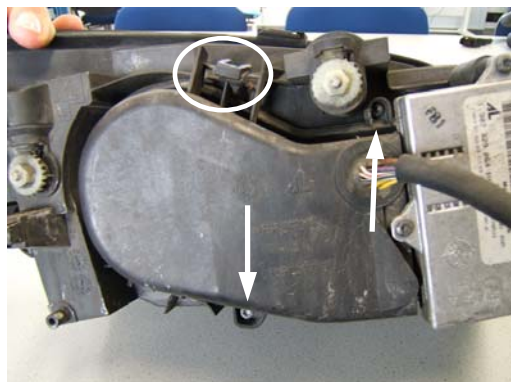


Fig. 3



Fig. 4



Fig. 5



Fig. 6