



Honda Jazz All engines

Light source replacement

Light sources are replaced as follows:

Passenger side:

Low beam and high beam:

- Turn the ignition off.
- Remove the front inner trim of the wing (expanding rivets, see Fig. 1). To make removal easier, raise the vehicle, screw the respective wheel off if necessary.
- Pull the plug off the H4 bulb (see Fig. 2).
- Then pull the all-round rubber seal off the headlight housing (see Fig. 2).
- Loosen the spring-wire clamp and take the bulb out of the reflector (see Fig. 3).

Position light:

- Remove the front inner trim of the wing (expanding rivets, see Fig. 1). To make removal easier, raise the vehicle, screw the respective wheel off if necessary.
- Turn the bulb socket anticlockwise (plug can remain connected) and pull it out of the reflector (see Fig. 4).

Indicator:

- Replacement of the indicator is straightforward and is carried out with the bonnet opened.

Driver side:

Bulletin



Low beam, high beam, indicator and position light:

- See driver side

Refit all the removed parts in sensible order. Check the lighting system to make sure it is working. Check the headlight setting and adjust if necessary.



Fig. 1



Fig. 2



Fig. 3



Fig. 4