



## **MERCEDES BENZ A-Class (W168) All engines**

### **Replacement of lamps**

The replacement of the lamps takes place as follows:

#### **Front passenger side:**

##### **Low beam and high beam light:**

- Switch off the ignition.
- Replacement takes place via a flap on the inside of the wing. Jack up the car for better accessibility.
- Turn the bayonet couplings to the left and release them (see Fig. 1).
- Take the cover out of the wing.
- Release the cover cap lock. For this, press the lever to the right (see Fig. 2).
- Take the cap out of the guides (see Fig. 3).
- Release the plug connections and spring-loaded wire clamp from the lamp and replace it (see Fig. 4).

#### **Driver's side:**

##### **Low beam and high beam light:**

- See front passenger side

##### **Indicator and position light:**

- The replacement of the indicator and position light is easy and takes place via the bonnet.



Re-install all disassembled parts in a sensible order. Check the light system for function. Check the headlight setting and adjust if necessary.



Fig. 1



Fig. 2



Fig. 3



Fig. 4