




Ford Puma, all

Condensed water inside the headlamp

To rectify the problem:

Check the headlamps for damage. If there is no recognisable damage and the condensed water will not dry off, after switching on the light, a modified ventilation kit must be fitted. The new kit contains 1x adapter, 1x screw, 1x clip, 1x edge protection, 1x ventilation hose, 1x filter element per vehicle side.

1. Remove the headlamp, dispose off the ventilation hose and clip
2. Remove number plate and air duct from the bumper
3. Fit the clip, adapter-ventilation hose and edge protection in to the from the air duct hole (see picture).
4. Renew filter element in the headlamp
5. Fit the new ventilation hose
6. Fit the headlamp and clip the ventilation hose onto the adapter
7. Fit the air duct and number plate
8. Repeat with the other side

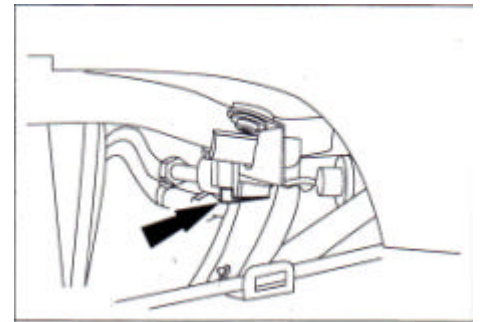

Please note

The ventilation hose on the right hand side must be routed in front of the coolant hose.

Don't bend the ventilation hose too sharply.

Best Regards
Your Service Partner Technical Team

Bulletin

