



# VW e-up! - light source replacement

Data sheet

Manufacturer

Volkswagen

Vehicle model

e-up!

Engine

Electric

Engine code

EABA / EAMA

Year of manufacture

From 2013

Symptoms

Replacing the bulbs – vehicle with halogen lamps

## Important safety note

## Replacing the light source

We recommend the following procedure when replacing bulbs:

- Switch off the lighting and ignition.
- Remove the key and keep it in a safe place.
- Secure vehicle against rolling away. Apply the handbrake
- Have spare bulbs ready to hand

Replace bulbs:

low beam / high beam, lamp type: H4 60/55W, Degree of difficulty: medium, Hella spare part number: 8GJ 002 525-131

- Carefully remove the electrical connector from the bulb
- Remove the rubber cover on the back of the lamp.

- Unhook the safety bracket on the bulb and fold it to the side
- Remove the bulb from the base plate
- Insert the new bulb, fold back the bracket and hook it in
- When installing the new bulb, it is important to make sure that the bulb is correctly seated in the lamp holder.
- Fit the rubber cover and plug in the electrical connector

Parking light / daytime running light, lamp type: W21/5W, Degree of difficulty: easy, Hella spare part number: 8GA 006 841-121

- Turn the lamp holder (1) together with the bulb a quarter turn to the left and remove it from the lamp
- Press the bulb slightly downwards, turn it to the left and remove it from the lamp holder.
- Insert the new bulb into the holder, press down slightly and turn to the right

Direction indicators, front, lamp type: PY21W, Degree of difficulty: easy, Hella spare part number: 8GD 008 893-002

- Turn the lamp holder (2) together with the bulb a quarter turn to the left and remove it from the lamp
- Press the bulb slightly downwards, turn it to the left and remove it from the lamp holder.
- Insert the new bulb into the holder, press down slightly and turn to the right


Then check the functioning of the lighting system. Check lamp adjustment and correct if necessary.

### **REPAIR INSTRUCTIONS**

Bulbs should only be replaced when they have cooled down. A defective bulb may only be replaced by a bulb of the same type. The relevant designation can be found on the lamp base plate. The maintenance and safety information in the vehicle operating instructions must be observed!

### **Safety note for electric vehicles!**

All repair work is only to be carried out by personnel trained in electrotechnical matters. Before the repair, the high-voltage (HV) system must be disconnected from the voltage by an HV expert who is certified to work on these types of systems. The country's specific laws and regulations on working on high-voltage systems must be observed and followed.

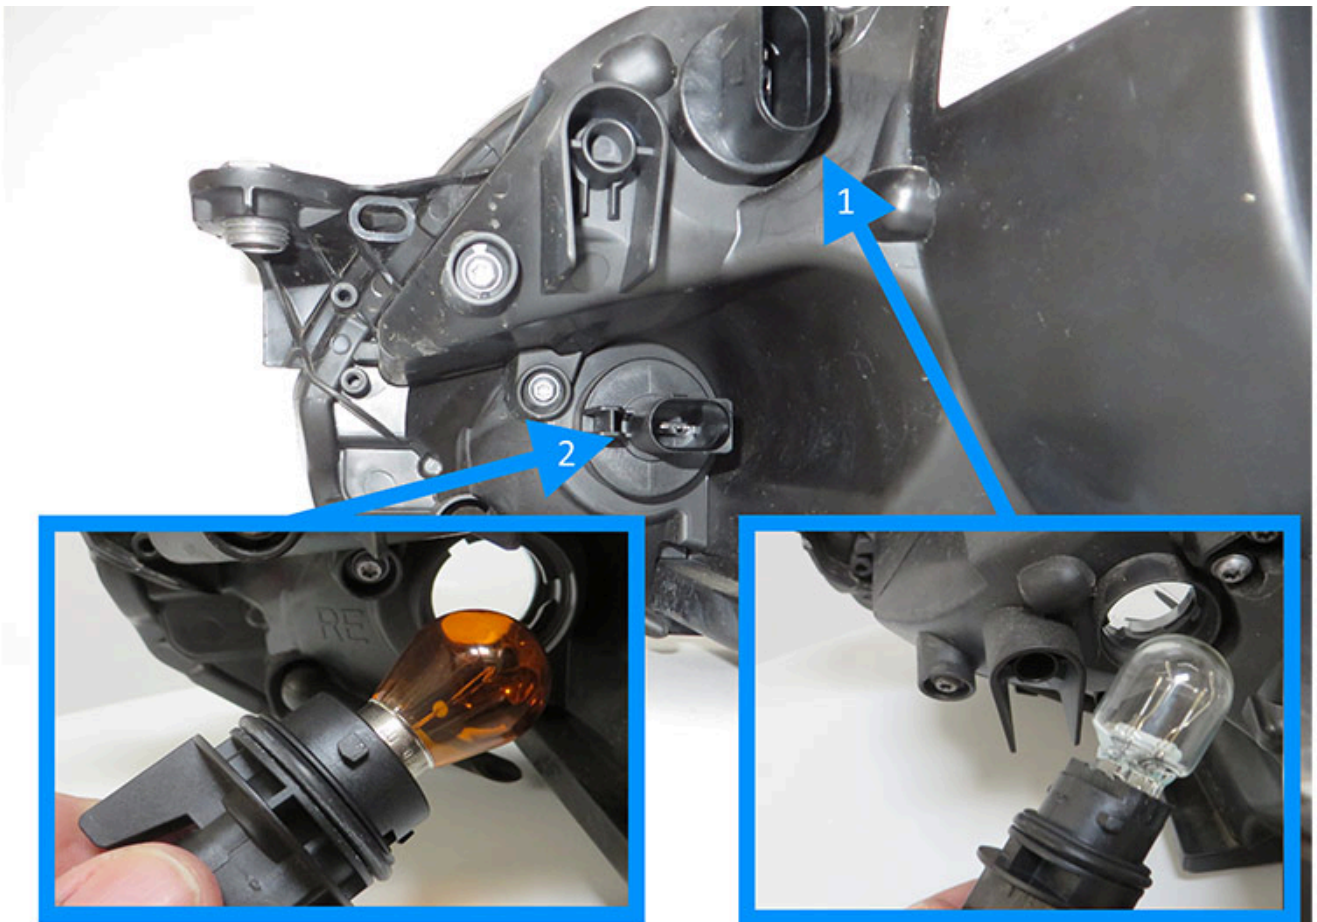

Reprinting, distribution, reproduction, exploitation in any form or disclosure of the contents of this document, even in part, is prohibited without our express, written approval; indication of the

document source is also required. The schematic illustrations, pictures and descriptions serve only for the purposes of explanation and representation of the instructions and cannot be used as a basis for installation or assembly work. All rights reserved.