



Audi A3 2.0 TDI PD Model year from 2003

Replacing the light source

Since the working steps are identical for both sides for this vehicle, they are explained using one side as an example. First switch the ignition off.

Low beam:

- Press the release lever of the cover cap downwards and take the cap off the rear of the headlight housing (see Fig. 1).
- Press the bulb plug slightly downwards, out of the mounting, and remove it from the headlight together with the bulb (see Fig. 2).
- Remove the bulb from the plug and replace it.

When installing the bulb, make sure it is in the correct position. The bulb must be pressed into the mounting as far as it will go. A look through the headlight glass helps with orientation (see Fig. 3).

High beam:

- Loosen the fastening clamp from the cover cap and remove the cap from the rear of the headlight housing (see Fig. 4).
- Press the bulb plug slightly downwards, out of the mounting, and remove it from the headlight together with the bulb (see Fig. 5).
- Remove the bulb from the plug and replace it.

Parklight:

- To reach the parklight bulb, remove the cover cap and the high-beam bulb as described for high beam.



- Use pointed pliers to pull the bulb socket with bulb out of the reflector and remove from the headlight (see Fig. 6).
- Replace the bulb.

Indicator:

- Unscrew the front screws (Torx 20) of the upper mudguard-panelling.
- Push the panelling to one side as far as necessary to reach the bulb.
- Turn the bulb base to the left as far as it will go and remove it from the housing together with the bulb (see Fig. 7).
- Replace the bulb.

Refit all the removed parts in reverse order. Check the lighting system to make sure it is in perfect working order. Check the headlight aim and adjust if necessary.



Fig. 1



Fig. 2

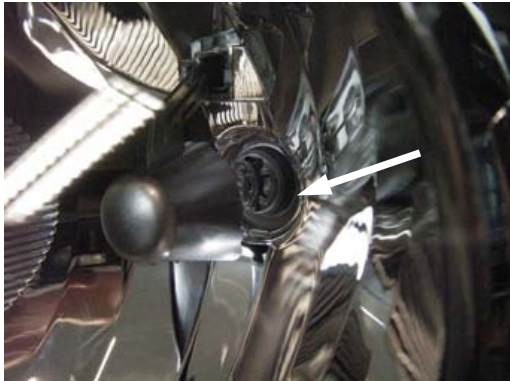


Fig. 3



Fig. 4

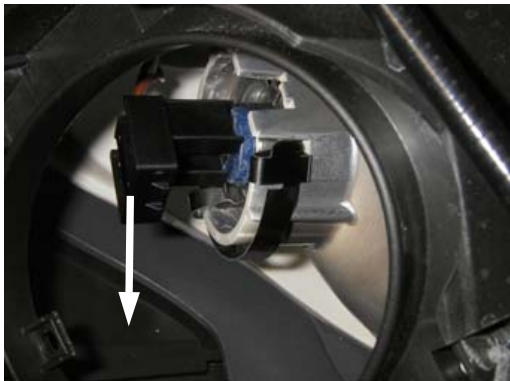


Fig. 5



Fig. 6



Fig. 7